




### Clean Screen


With the exception of normal cleaning, the keypad is maintenance free. Press the "Display and Audio" icon, and do the following:

ICON	ACTION	NOTES
	<ol style="list-style-type: none"> <li>1. Press the <b>CLEAN SCREEN</b> icon. A pop-up window displays "Touch Screen has been disabled so that you may wipe the screen clean. Please use a damp, soft cloth. <b>DO NOT</b> use any liquids, sprays, or ammonia-based cleansers. Press <b>CONTINUE</b> to disable touchscreen." *Panics cannot be initiated during this process*</li> <li>2. Press <b>Continue</b> or <b>Cancel</b> to exit.</li> </ol>	<p>When the "Continue" icon is pressed the message "<b>Touch Screen Disabled for =30 Seconds</b>" is displayed. During these 30 seconds the touch screen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touch screen is active.</p>

**IMPORTANT:** Do not use an abrasive cleaning agent or abrasive cloth when cleaning the keypad or damage to the touch screen may occur.



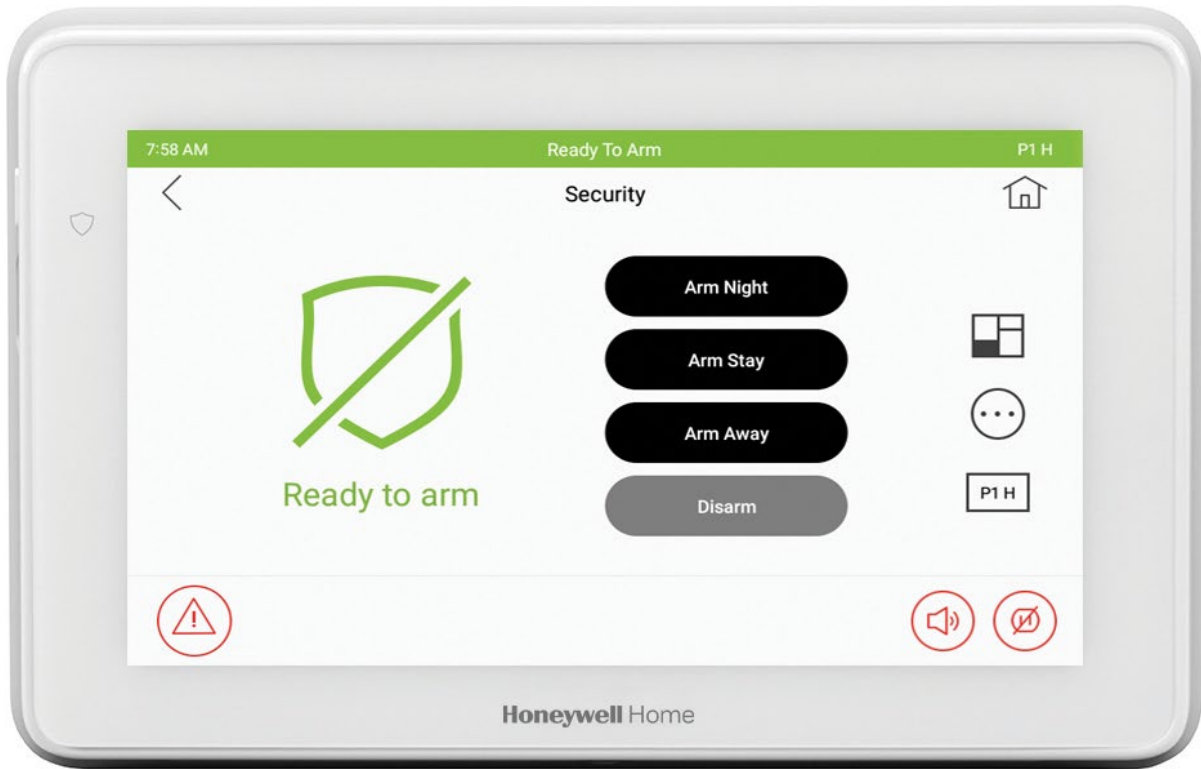

The **Emergency** screen cannot be accessed while running in the clean screen mode.



### Clean Screen

With the exception of normal cleaning, the keypad is maintenance free. Clean the Touchscreen as follows:

ICON	ACTION	NOTES
	1. Select the <b>Settings</b> icon. 2. Select the <b>Disp &amp; Audio Setup</b> icon. 3. Enter your "Authorized Code", if required.	At the " <b>Touch Screen Disabled for =30 Seconds=</b> " screen, the touchscreen should be wiped clean of fingerprints using a mild soap solution and a soft cloth. When the counter reaches zero, the window automatically closes and the touchscreen is active. A pop-up window displays " <b>Touch Screen will be disabled so that you may wipe the screen clean. Please use a damp, soft cloth. DO NOT use any liquids, sprays, or ammonia-based cleansers. Touch CONTINUE to disable touchscreen.</b> " <b>**Panics cannot be initiated during this process**</b>
	4. Select the <b>CLEAR SCREEN</b> icon to disable the keypad for 30 seconds. 5. Select <b>Continue</b> to disable the touchscreen. 6. Select <b>Cancel</b> to exit.	

**NOTE:** The **Emergency** screen cannot be accessed while running in the clean screen mode.

**IMPORTANT:** Do not use an abrasive cleaning agent or abrasive cloth when cleaning the touchscreen or damage may occur.